

Which IM system do I have? Note the difference in the shape at the base of the camera.



Current IM system (900 or 600) for LED slit lamps BQ900 and BP900. Use USB3 Port to connect trigger (RM02) to computer.

Previous Non-LED version. Use USB2 Ports to connect trigger (RM01) to computer.



## BI 900 with Imaging Set.



Camera

Use USB 3 port to connect trigger to computer.