

Tightening of Slit Adjust Control

1. For older model slit lamps, turn the center screw to the right very slightly with a jeweler's screwdriver. Use quarter turns until you achieve the desired amount of tension.
2. For newer model slit lamps, turn the center screw to the right very slightly with a 2 mm metric allen wrench. Use quarter turns until you achieve the desired amount of tension.



